



Pixbee Active Fit

Fitness Smart Watch

USER MANUAL

CONTENTS

1.0	GETTING STARTED.....	5
1.1	WHAT'S IN THE BOX	5
1.2	SMART WATCH OVERVIEW	5
1.3	SMART WATCH CONTROLS	6
1.3.1	BUTTON CONTROLS.....	6
1.3.2	GESTURE CONTROLS.....	7
1.4	CHARGING AND POWERING ON/OFF	8
1.4.1	CHARGING	8
1.4.2	POWERING UP THE WATCH	9
1.4.3	POWERING OFF THE WATCH	9
1.4.4	TURNING ON THE WATCH DISPLAY	9
1.4.5	TURNING OFF THE WATCH DISPLAY	9
1.4.6	CHECKING THE BATTERY LEVEL	9
1.5	PAIRING AND SETUP.....	9
1.5.1	USING THE WATCH WITHOUT THE APP.....	9
1.5.2	USING THE WATCH WITH THE APP.....	10
1.6	WEAR AND CARE	12
1.6.1	CHANGING THE STRAP.....	12
2.0	PIXBEE WATCH FEATURES	13
2.1	SHORTCUT TILES.....	13
2.2	SETTINGS	13
2.2.1	WATCH FACES OPTIONS.....	13
2.2.2	APP VIEW OPTIONS	14
2.2.3	SETTING DISPLAY BRIGHTNESS	14
2.2.4	SETTING SCREEN TIMEOUT	14
2.2.5	SETTING SCREEN WAKE	14
2.2.6	SETTING SCREEN COVER-TO-SLEEP.....	14
2.2.7	SILENT MODE.....	14
2.2.8	SETTING RINGTONE VOLUME	15
2.2.9	SETTING RINGTONE	15
2.2.10	SETTING VIBRATION INTENSITY	15

2.2.11	SETTING WATCH APP RESTRICTIONS.....	15
2.2.12	SETTING THE LOWER BUTTON FUNCTION	16
2.2.13	SETTING SCREEN LOCK.....	16
2.2.14	SETTING USER PROFILE	17
2.2.15	SETTING DATE AND TIME.....	17
2.2.16	POWER SAVING MODE	18
2.2.17	SETTING DEVICE LANGUAGE.....	18
2.2.18	RESTARTING THE WATCH	18
2.2.19	RESETTING THE WATCH	18
2.2.20	VIEWING PRODUCT INFORMATION	19
2.2.21	WATER DRAINING MODE	19
2.2.22	FLASHLIGHT.....	19
2.3	DAILY ACTIVITIES.....	19
2.3.1	SETTING DAILY GOAL	19
2.3.2	VIEWING ACTIVITY RECORD.....	19
2.3.3	SETTING WALK REMINDER	20
2.3.4	SETTING DRINK REMINDER	20
2.3.5	SETTING HAND WASH REMINDER	21
2.4	IN CASE OF EMERGENCY (ICE) PROFILE	21
2.5	WORKOUT	21
2.5.1	EDITING WORKOUT MODES	21
2.5.2	STARTING AND ENDING A WORKOUT	21
2.6	WORKOUT HISTORY.....	23
2.7	HEART RATE.....	23
2.7.1	MANUAL HEART RATE MEASUREMENT.....	23
2.7.2	CONTINUOUS HEART RATE MONITORING.....	24
2.7.3	SETTING HIGH HEART-RATE ALERT	24
2.7.4	SETTING LOW HEART RATE ALERT	24
2.7.5	VIEWING HEART RATE	24
2.8	BLOOD OXYGEN LEVEL (SPO2).....	24
2.8.1	MANUAL SPO2 MEASUREMENT	25
2.8.2	AUTOMATIC SPO2 MEASUREMENT	25

2.8.3	SETTING LOW SPO2 ALERT	25
2.8.4	VIEWING SPO2.....	25
2.9	SLEEP MONITORING.....	25
2.10	AMBIENT NOISE METER.....	26
2.10.1	VIEWING MEASURED SOUND LEVEL	26
2.11	MUSIC CONTROL.....	26
2.12	AUDIOBOOKS.....	26
2.13	WIRELESS INTERCOM.....	27
2.14	LEARN ARCADE.....	27
2.15	ALARM	28
2.16	STOPWATCH.....	28
2.17	TIMER.....	28
2.18	MISSION REWARDS	28
2.18.1	HABITS REMINDER	29
2.18.2	REWARD SYSTEM.....	30
2.19	DIGITAL PET.....	32
2.20	GAMES	33
2.21	SEEKING HELP	33
2.22	PAIRING QR CODE.....	33
3.0	RYZE CONNECT APP.....	33
3.1	SYNCING WITH THE WATCH.....	33
3.2	UPDATING THE WATCH.....	33
3.3	DISCONNECTING THE WATCH.....	34
3.4	FAMILY MEMBER DEVICE MANAGEMENT.....	34
3.5	THIRD-PARTY APPS SUPPORT.....	35
3.5.1	SHARING DATA WITH STRAVA.....	35
3.5.2	SHARING DATA WITH HEALTH CONNECT	35
3.5.3	SHARING DATA WITH APPLE HEALTH	35
3.6	VIRTUAL MEDAL AWARDS	35
3.7	UPDATING THE APP	35
3.8	USER PROFILE SETTINGS.....	35

3.9	PREFERENCE SETTINGS	35
3.10	ACCOUNT SETTINGS	36
3.11	DATA PRIVACY AND SECURITY	36
3.12	SIGNING OUT	36
4.0	SPECIFICATIONS.....	36
5.0	SAFETY AND HANDLING	37
6.0	WARRANTY TERMS AND CONDITIONS.....	38
6.1	INDEMNITY.....	39
6.2	WARRANTY AND WARRANTY DISCLAIMER.....	39
6.3	LIMITATIONS OF LIABILITY	40

1.0 GETTING STARTED

Thank you for your purchase. Please read this user manual carefully before using the smart watch and retain this user manual for future reference.

CAUTION: The Pixbee Active Fit smart watch is not a medical or therapeutic device. Any data or information provided should not be used for medical diagnosis and/or treatment, and monitoring or preventing other medical health issues. Always consult your doctor for health and medical advice.

1.1 WHAT'S IN THE BOX

1 x Pixbee Active Fit Smart Watch,
1 x Magnetic Charging Base,
1 x User Manual

1.2 SMART WATCH OVERVIEW



1.3 SMART WATCH CONTROLS


Pixbee Active Fit Smart Watch has a touch screen that supports operations including tap, swipe left/right, and swipe up/down, and two side buttons that support short press and long press operations.

1.3.1 BUTTON CONTROLS

OPERATION	FUNCTION	NOTE
Short Press Upper Button	<ul style="list-style-type: none">• To wake up the screen when it is off• To return to the home screen.• To open the applications list from the home screen.• To pause/resume a workout session in progress.	
Press and Hold Upper Button	<ul style="list-style-type: none">• To power up the watch.• To end a workout session in progress.• To restart the watch, switch to the home screen, then press and hold the button for more than 8 seconds.	Please fully charge the smart watch before first use.
Short Press Lower Button	<ul style="list-style-type: none">• To invoke the watch app set for the Lower Button.	
Press and Hold Lower Button	<ul style="list-style-type: none">• To invoke the power off/restart screen, switch to the home screen, then press and hold the Lower Button for more than two seconds.	

1.3.2 GESTURE CONTROLS

The following diagram outlines the various gesture controls you can make from the watch's **Home** screen to access watch settings and other information.

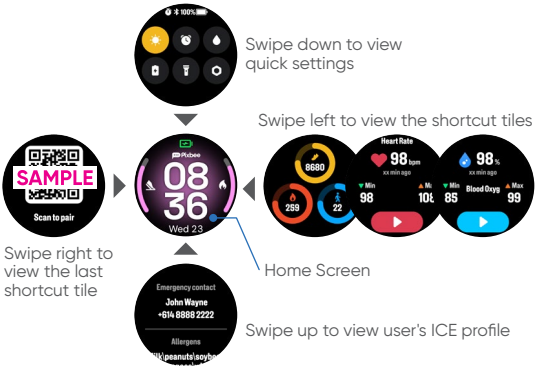

OPERATION	FUNCTION
Swipe up	<ul style="list-style-type: none">• To view user In-Case-of-Emergency (ICE) profile from the home screen.• To navigate a list and view further screen details.• To view workout data during a workout session.
Swipe down	<ul style="list-style-type: none">• To view quick settings from the home screen.• To navigate a list and view further screen details.• To view workout data during a workout session.
Swipe left	<ul style="list-style-type: none">• To view feature shortcut tiles from the home screen.• To access the music page during a workout session.
Swipe right	<ul style="list-style-type: none">• To view the last feature shortcut tile from the home screen.• To return to the upper menu from the sub-menu.• To access the control page during a workout session.
Tap	<ul style="list-style-type: none">• To confirm screen selection.• To enter sub-menu and view details.
Tap and hold	<ul style="list-style-type: none">• To change the watch face on the home screen.

1.4 CHARGING AND POWERING ON/OFF

1.4.1 CHARGING

Please fully charge the watch before first use.

NOTE: Replacement charging cable: PXB-FITATVZCH



1. Align and attach the charging base to the magnetic contacts at the back of the smart watch.
2. Connect the USB end of the charging base to a USB port of a computer, or a standard adaptor with a DC output voltage of 5V and an output current exceeding 0.5A, that complies with safety standards as well as national and local laws and regulations.
3. After a short moment, a charging icon will appear on the watch screen. When charging is complete, the indicator will display 100%. During charging operation, the watch may become slightly warm. Detach the watch from the charging base once it is fully charged and allow the watch to cool down.

CAUTION:

- Use only a manufacturer recommended charging base for charging.
- Before charging, wipe clean the charging contact pins on the watch with a clean, dry cloth to remove any residual sweat or moisture.
- To prevent short circuits, keep the magnetic-charging contacts and charging port dry and clean and away from conductive materials such as metal powders, pencil leads and liquids.
- Do not use the watch while charging. Allow the watch to cool down completely before wearing.
- Keep the watch and charging base away from strong magnetic fields and objects such as magnetic stripe cards, credit cards, phone cards, passbooks and microwaves to protect its performance.
- Do not expose the watch and charging base to high temperatures for prolonged periods.

1.4.2 POWERING UP THE WATCH

Methods for powering up the watch:

1. Before initial use, charge to activate and turn on the watch. The watch's display will turn on after a short while.
2. Press and hold the Upper Button until the watch start-up screen appears.

NOTE: If the watch cannot be powered up after a period of inactivity, it needs to be charged for a few minutes until the watch screen appears and display the charging status.

1.4.3 POWERING OFF THE WATCH

Methods for powering off:

1. Swipe down on the watch's home screen, tap the **Settings icon** . Tap **General**. Tap **Power Off** and tap  to confirm selection.
2. From the watch's home screen, press and hold the Lower Button until the power off screen appears. Tap **Power Off button** and tap  to confirm selection.

1.4.4 TURNING ON THE WATCH DISPLAY

Methods for waking the display:

1. Press the Upper/Lower Button.
2. Raise and rotate your wrist inwards when the screen-wake feature is enabled.

1.4.5 TURNING OFF THE WATCH DISPLAY

The watch supports screen auto-off feature. To edit the timer setting, swipe down on the watch's home screen and tap the **Settings icon** . Tap **Display & brightness**. Tap **Screen timeout**. Swipe up/down to select a duration and tap  to confirm your selection.

1.4.6 CHECKING THE BATTERY LEVEL

Methods for checking the battery level on the watch:

1. Swipe down on the watch's home screen to reveal the battery level on the quick setting panel.
2. Charge the watch and check the battery level on the charging screen.

1.5 PAIRING AND SETUP

The Pixbee Active Fit Smart Watch can be set up with or without its companion app. Certain features are not accessible when the watch is used in the standalone mode.

1.5.1 USING THE WATCH WITHOUT THE APP


Follow the steps below.

1. Fully charge to activate and turn on the watch. Then follow screen prompt to choose a device language.

2. To confirm using the watch in the standalone mode, tap the arrow button in the screen as shown and proceed to the next setting.



3. Tap or swipe up/down the screen options to edit your selection for unit of measurement, user-profile data (gender, age, height and weight), and date-time settings (year, month, day, time format, time). Tap the arrow button to confirm selection and proceed to the next step. The watch utilises user-profile to improve accuracy of the measured activities. You can edit the settings later in the watch settings.

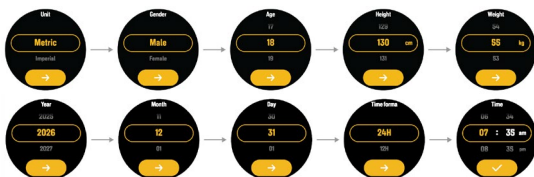


NOTE: To access more watch face options, set up habit reminders, upload daily data, update watch software and unlock full features, you must pair and connect the watch with the **Ryze Connect** app.

1.5.2 USING THE WATCH WITH THE APP

With the **Ryze Connect** app installed on your smartphone, you can set-up, manage and access the full features of the watch. The app is compatible for use with iPhones using iOS 14 or later, and with Android smartphones using Android 7.0 or later.

Follow the steps below to complete watch setup and pairing (binding) with the app.

1. Fully charge to activate and turn on the watch. Then follow screen prompt to choose a device language.
2. To confirm using the watch in the pairing mode with the app, swipe left on the first watch screen until you reach the screen with QR code for pairing.

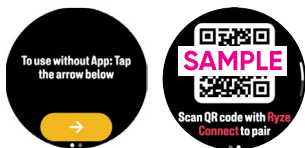

3. Go to your smartphone, and enable Bluetooth and Location services on the phone.
4. Download the **Ryze Connect** app from the iOS App Store or the Google Play Store. Alternatively, you can scan the QR code to download the app.



NOTE: If you have already installed the app on your smartphone, check that it is the latest version. If necessary, update the app through the Google Play Store or the iOS App Store.

5. Open the **Ryze Connect** app. If you already have a **Ryze Connect** account, log in to your account. If you do not have an account, tap the **Login** button, and follow the prompts to register a new account. Follow the on-screen instructions to grant permissions when prompted.
6. Pair and connect with the watch: Go to the **Device** tab in the app and tap the **+** sign. The app will then automatically search for devices to connect. Tap and select **Pixbee Active Fit** to connect. Otherwise, tap the **[-]** sign at top of the app screen, then scan the QR code on the watch with your phone camera.
7. Complete the setup by following the on-screen instructions in the app. Once the setup is complete, read through the user manual to learn more about the watch and how to manage its functions and features with the app.

NOTE: If your Pixbee Active Fit smart watch is currently connected to a smartphone and you would like to pair it to a new smartphone, first open the watch settings. Tap **Connect More**. Tap **✓** to confirm selection. For iPhones, you will also need to delete the watch from the iPhone's Bluetooth device list. In the iPhone's Bluetooth device list, touch the icon **i** next to the watch name and tap **Forget This Device**.

1.6 WEAR AND CARE



The watch should rest a finger's width below your wrist bone. The bottom of the watch should be slightly in contact with your skin. Keep the watch secure on your wrist during a workout.

To avoid discomfort, do not overtighten the watch on your wrist. Take it off from time to time.

The watch has a 3ATM waterproof rating. It can be worn in cold-water showers, shallow waters, indoor pools and swimming near the shoreline.

NOTE: Do not use the watch in spas, hot springs, deep dives or any high-temperature, high-humidity environment.


CAUTION:

- If you find the watch particularly uncomfortable to wear, please adjust the strap accordingly for a better fit or take it off.
- Clean and dry the watch and its strap after heavy workouts or if the watch has been exposed to sweat or fresh water. Wearing dirty and wet watch straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if you have sensitive skin or allergies. If you experience any skin irritation, please stop wearing the watch.
- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

1.6.1 CHANGING THE STRAP

The watch uses quick-release straps. If you wish to replace the strap, follow these steps:

1. Turn the watch over to expose the underside of the strap.

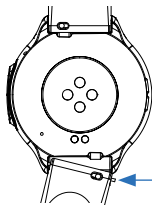

QUICK-RELEASE PIN


Push the quick-release pin inwards and pull the strap away.

2. To attach a new strap, reverse the removal process: Insert one end of the quick-release pin into the designated hole on the strap holder. While holding the pin inward, align and insert the opposite end into the corresponding hole. Release the pin and ensure the strap is securely fastened before use.

2.0 PIXBEE WATCH FEATURES

2.1 SHORTCUT TILES

Tiles are a collection of shortcuts to applications located on both sides of the watch's home screen. The listing and order of tiles can be customised via the **Ryze Connect** app.

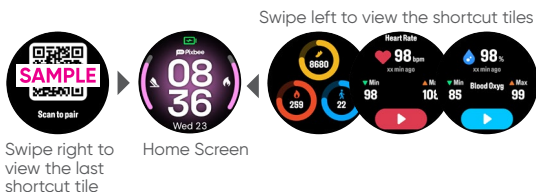

Managing tiles with the app:

1. Open the **Ryze Connect** app. Go to the **Device** tab. Tap **More Settings**. On the following page, tap **Shortcuts**. Tap **−** to remove an application. Tap **+** to add an application.
2. To rearrange the order of the tiles, hold and drag the **≡** icon next to a name. Tap **◀** to save the changes.

2.2 SETTINGS

2.2.1 WATCH FACES OPTIONS

Within the **Ryze Connect** app, you will find a **Watch Face Market** that features a collection of watch faces to choose from.

Changing the watch face on the watch

To view watch faces stored locally on the watch, tap and hold the watch's home screen for about 2 seconds. Then swipe screen to view the collection. Tap on a watch face of your choice to confirm your selection.

Changing the watch face with the app

Open the **Ryze Connect** app and go to the **Device** tab. Locate the **Watch Face Market** and tap on **More** to show the various watch face designs available for change. Tap on your selected design and then tap **Add and Install**. The installation will sync with your watch, and the new watch face will appear on your watch.

NOTE: If you cannot install a new watch face on the watch, the watch memory may be full. Open the **Ryze Connect** app and go to the **Device** tab. Go to **Watch Face Market** > **Me**, delete some watch faces in the watch, and then try installing the new watch face again.

2.2.2 APP VIEW OPTIONS

The watch provides different layouts for app view. Follow these steps to change the app view setting.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Then tap **App view**. Then tap the radio button next to a layout option to confirm the selection.

2.2.3 SETTING DISPLAY BRIGHTNESS

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Display & brightness**. Tap **Brightness adjustment**. Swipe up/down the screen to select a brightness value and tap  to confirm your selection.

2.2.4 SETTING SCREEN TIMEOUT

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Display & brightness**. Tap **Screen timeout**. Swipe up/down the screen to select a duration and tap  to confirm your selection.

2.2.5 SETTING SCREEN WAKE

Screen wake mode allows you to turn on the watch's home screen simply by raising and turning your wrist.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Display & brightness**. Toggle the switch for **Raise to wake** to enable or disable the feature.

2.2.6 SETTING SCREEN COVER-TO-SLEEP

Screen cover-to-sleep feature allows you to turn off the watch display simply by covering the screen with your palm.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Display & brightness**. Toggle the switch for **Cover to sleep** to enable or disable the feature.

2.2.7 SILENT MODE

Silent mode will mute all notifications.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Sounds and haptics**. Toggle the switch for **Silent mode** to enable or disable the feature.

2.2.8 SETTING RINGTONE VOLUME

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Sounds and haptics**. Tap **Ringtone volume** and adjust the volume bar.

2.2.9 SETTING RINGTONE

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Sounds and haptics**. Tap **Ringtone settings**. Tap on the corresponding radio button to select a ringtone.

2.2.10 SETTING VIBRATION INTENSITY

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Sounds and haptics**. Tap **Vibration intensity**. Swipe up/down the screen to select a value and tap  to confirm your selection.

2.2.11 SETTING WATCH APP RESTRICTIONS

Classroom mode feature allows you to enable or disable selected watch applications based on scheduled time settings.

Access to classroom mode setting is protected with a password to prevent unintended changes. A password must be set for the classroom mode to take effect.

Setting classroom mode on the watch

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Classroom mode** and follow screen prompts to complete settings for **Time Period**, **Repeat Cycle**, **Apps**, **State** and **Passcode settings**.

- When **'Allow'** is chosen in the **State** setting, the selected apps in the **Apps** setting are enabled throughout the scheduled period.
- When **'Deny'** is chosen in the **State** setting, the selected apps in the **Apps** setting are disabled throughout the scheduled period.

Setting classroom mode with the app

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **More Settings**. Tap **Classroom mode**. If prompted, enter the password set for the classroom mode. Follow screen prompts to complete settings for **State**, **Apps**, **Starting Time**, **Ending Time**, **Repeat Cycle**, and **Password setup**. Tap **Save**.

- When **'Allow'** is chosen in the **State** setting, the selected apps in the **Apps** setting are enabled throughout the scheduled period.

- When '**Disable**' is chosen in the **State** setting, the selected apps in the **Apps** setting are disabled throughout the scheduled period.

Clearing classroom mode password on the watch

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Classroom mode**. Tap **Passcode settings**. Enter ***123456#** and tap  to confirm selection.

NOTE: Press and hold the # key to switch to the * character.

Clearing classroom mode password with the app

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **More Settings**. Tap **Classroom mode**. Enter ***123456#** and tap  to confirm selection.

2.2.12 SETTING THE LOWER BUTTON FUNCTION

When the watch Lower Button is pressed briefly, the watch invokes a preset watch application. You can customise the action of the Lower Button.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Lower button settings**. Tap on the corresponding radio button to select an app, swipe down and tap  to confirm your selection.

2.2.13 SETTING SCREEN LOCK

When the password feature is enabled, the watch automatically locks its screen when removed from the wrist. To access other menus, tap the display and enters the password to unlock it.

NOTE:

If you enter the wrong password multiple times, the following restrictions apply:

- After 3 consecutive failed attempts, you must wait 10 minutes before re-entering the password, or tap the on-screen button  to reset the watch to factory settings. All data on the watch will be erased after a reset.
- After 6 consecutive failed attempts, you must wait 1 hour before re-entering the password, or tap the on-screen button  to reset the watch to factory settings. All data on the watch will be erased after a reset.
- After 9 consecutive failed attempts, you must reset the watch to factory settings before it can be used again. All data on the watch will be erased after a reset.

Setting a passcode:

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **screen lock**. Tap **Set passcode**. Enter a 6-digit password twice. Tap **X** to cancel entry.

Disabling passcode:

To disable a passcode which has been set, swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **screen lock**. Tap **Disable passcode**. Enter current passcode to disable the passcode setting.

Changing the passcode:

To change the passcode which has been set, swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Screen lock**. Tap **Change passcode**. Enter the current password. Then enter a new 6-digit password twice.

2.2.14 SETTING USER PROFILE

The watch allows you to set your preferred measurement system, and uses the user profile data such as gender, age, height and weight to improve accuracy of the measured activities.

Changing user profile on the watch

Whilst using the watch in the standalone mode (without pairing to app), you can edit the user preference and profile via the watch.

To make changes, swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Personal info**. Use swipe and tap gestures to view and edit settings. Tap  to confirm your selection.

Changing user profile with the app

If you use the smart watch with the **Ryze Connect** app, to make changes to the user profile, open the app and go to **Me** tab. Tap on **User Profile Image** in the top-left corner. You can edit the username, user profile image and profile settings. Tap  to save changes made.

To change the preference settings, open the app and go to **Me** tab. Tap **Settings**. Tap **Preferences**. Adjust your preferences for unit of measurement and date and time formats. Tap  to save the settings.

2.2.15 SETTING DATE AND TIME

Changing date and time on the watch

Whilst using the watch in the standalone mode (without pairing to app), you can edit date time settings via the watch.

To make changes, swipe down on the watch's home screen and tap the **Settings icon** . Tap **Time**. Use swipe and tap gestures to view and edit settings. Tap  to confirm your selection. Keep the watch charged in standalone mode to prevent loss of time and date settings. A full battery depletion will require these to be reset.

Changing date and time with the app

When the watch is connected to the **Ryze Connect** app, the date and time settings are automatically updated.

2.2.16 POWER SAVING MODE

Entering power saving mode:

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **power saving mode icon**.  Tap  to confirm selection.

Exiting power-saving mode:

Press and hold the Upper Button.

2.2.17 SETTING DEVICE LANGUAGE

Changing language on the watch

Whilst using the watch in the standalone mode (without pairing to app), you can edit language setting via the watch.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **Language**. Swipe screen to view options and tap  to confirm selection.

Changing language with the app

If you use the smart watch with the **Ryze Connect** app, to make changes to the user profile, open the app and go to **Device** tab. Tap **More Settings**. Tap **Device Language**. Tap to select a language and then tap **<** to save your selection.

2.2.18 RESTARTING THE WATCH

Methods for restarting the watch:

1. From the watch's home screen, swipe down and tap the **Settings icon** . Tap **General**. Tap **Restart** and tap  to confirm selection.
2. From the watch's home screen, press and hold the Lower Button for at least 2 seconds until the restart option appears on display. Tap the onscreen restart button and tap  to confirm selection.

2.2.19 RESETTING THE WATCH

NOTE: Once the watch is reset, it will restore to its factory settings, and all existing data will be deleted. You will need to complete pairing process before use.

Swipe down on the home screen, tap the **Settings icon** . Tap **General**. Tap **Reset** and tap  to confirm selection.

2.2.20 VIEWING PRODUCT INFORMATION

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Settings icon** . Tap **About Device** to view the device's MAC address and information.

2.2.21 WATER DRAINING MODE

Water draining mode helps to expel water from the watch.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Draining icon**  to enable the feature and follow screen prompt to complete the process.

2.2.22 FLASHLIGHT

The watch includes a flashlight application.

Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Flashlight icon**  to toggle it on or off.

2.3 DAILY ACTIVITIES

The amount of daily activities that you undertake can contribute to your overall fitness and health. Your watch monitors your daily activities, such as tracking your steps, activity calories, and walking distance. It can track all these parameters automatically.

NOTE: The smart watch uses the user profile data such as gender, age, height and weight to improve accuracy of the measured activities. To adjust user-profile settings, refer to the chapter **SETTING USER PROFILE**.

2.3.1 SETTING DAILY GOAL

Setting a daily goal on the watch:

From the watch's home screen, press the Upper Button to open applications list. Tap **Activity Data**. Swipe up and tap **Set goal**. Follow prompt to set a daily goal for **Steps**, **Calories**, **Active Time**, and **Walking Time** and tap  to save the settings.

Calories: The estimated energy calculated while the watch detects movement from activities.

Active Time: The total minutes of data recorded while the watch detects activity of moderate-to-high intensity.

Walking Time: The total hours of data recorded while the watch detects standing and movement for at least a minute.

2.3.2 VIEWING ACTIVITY RECORD

Viewing activity records on the watch

From the watch's home screen, press the Upper Button to open applications list. Tap **Activity Data** and swipe the screen to reveal recorded data.

Viewing family members' step ranking on the watch:

The watch provides a snapshot of family members' step ranking when all members' watches and the **Ryze Connect** app are synchronised regularly.

To view the steps ranking on the watch, from the watch's home screen, press the Upper Button to open the applications list. Tap **Activity Data**. Swipe the screen and tap **Family Steps**.

Viewing activity records in the app

The **Ryze Connect** app allows you to upload health, exercise and fitness data from a connected watch and enables easy viewing of recorded statistics.

Sync the connected watch data to the app regularly. To synchronise data, open the app, go to the **Home** tab, swipe down the middle of the phone screen and release your finger when you see ↑.

Methods for viewing data in the app:

1. Go to the **Home** tab. Tap the fitness tricolour ring tab to review statistics on activity.
2. Go to the **Me** tab. Tap **My Data**. Tap to view activity data, health data and workout records.
3. To view weekly health reports, go to the **Me** tab. Tap **Health Report**. Tap a report to view details.

2.3.3 SETTING WALK REMINDER

Set a reminder to show on the watch to get up and walk around at the 50-minute mark every hour to reach daily steps goal.

Setting up a walk reminder

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **Health**. Tap **Walk-Around Reminder**. On the following screen, turn on the switch and set the timing, an hourly steps goal, or a repeat cycle. Tap < to save the settings.

2.3.4 SETTING DRINK REMINDER

Set a reminder to show on the watch to drink water at set intervals to stay hydrated.

Setting up a drink reminder

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **Health**. Tap **Drinking Reminder**. On the following screen, turn on the switch and set the timing and repeat cycle. Tap ◀ in the top-left corner to save the settings.

2.3.5 SETTING HAND WASH REMINDER

Set a reminder to show on the watch to wash hands at regular intervals to maintain good hygiene.

Setting up a wash reminder

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **Health**. Tap **Wash-Your-Hand Reminder**. On the following screen, turn on the switch to set the timing or a repeat cycle. Tap  in the top-left corner to save the settings.

2.4 IN CASE OF EMERGENCY (ICE) PROFILE

Be prepared. Set up an ICE profile to show on the watch for quick access in emergencies.

Managing ICE profile with the app

Open the **Ryze Connect** app and go to the **Device** tab. Tap **Emergency Information**. Follow prompts and complete the details. Tap  in the top-left corner to save the settings.

Viewing ICE profile on the watch

Swipe up from watch's home screen.

2.5 WORKOUT

The **Workout** application on the watch allows you to manage individual workout sessions. You can set a specific goal, such as workout duration or distance, let the watch track the progress and provide a summary of the exercise session once completed. You can review the workout history on the watch via the **History** application or on your smartphone using the **Ryze Connect** app.

2.5.1 EDITING WORKOUT MODES

Pixbee Active Fit Smart Watch supports 25 workout modes.

2.5.2 STARTING AND ENDING A WORKOUT

Starting and ending a workout on the watch:

1. From the watch's home screen, press the Upper Button to open the applications list.
2. Tap **Workout**. Swipe the screen up/down to identify a workout from workout list.
3. To start a workout session without goal setting, simply tap the workout name.
4. To set a goal before starting a session: Tap  next to the workout name to reveal goal setting options which vary by workout. Swipe the screen and tap **Duration**, **Calories**, **Distance** or **Laps** to set your goal. Tap  to confirm the setting and start recording the session.

5. During a workout session, you can do the following:

- Swipe up/down from the edge of the workout screen to view more data which vary by workout mode.
- Swipe right from the edge of the workout screen to switch to the pause/stop control screen. Press the Upper Button to resume/pause the workout.
- Swipe left from the edge of the workout screen to switch to the music control screen. Swipe to return to the workout screen.
- Press and hold the Upper Button to end a workout session. A workout summary is displayed after the session has ended.

NOTE: Music and session control screens are **not available** for swimming mode.

Starting and ending a workout with the app:

You can start and end some workout modes on the watch from the **Ryze Connect** app.

NOTE: For workout control and route tracking using connected phone's GPS, keep your smartphone and watch close to each other to ensure they are Bluetooth-connected throughout the session.

1. When prompted, grant the app permission to access the phone's location service.
2. Open the **Ryze Connect** app. Go to the **Exercise** tab:
 - Use swipe and tap gesture to choose a workout mode above the map view. To edit the workout list above the map view, tap the ⓘ icon and then tap **Edit Sports**. To remove/add a workout mode, tap  / . To rearrange workout modes, hold and drag the ≡ icon next to the workout name. Tap  to save the settings.

NOTE: Before starting a workout session in the app, ensure the same workout mode is available on the **Workout** list on the watch. If not, add the desired workout mode to the watch first.

- To set a workout goal before starting a session: Tap . Tap **Training Goal** to reveal available goal options. In settings, tap **Yes** to confirm the selection.
- To turn on the workout high heart rate alert before starting a session: Tap . Tap **Workout HR Alert**. Turn on the switch for **High Heart Rate Alert**. If available, tap **Upper HR limit** to set a heart rate value for alert. Tap  to save the settings.

- To turn on voice cue broadcasted from the phone for distance alert: Tap . Tap **Distance Voice Cue**. Tap to choose a **Distance**. Tap  to save the settings.
3. To start a workout session, tap the on-screen **Start button**. Once you have started a workout in the app, the connected watch will sync and start the same workout.
 4. During a workout session, you can do the following:
 - Press the on-screen pause button  to pause the workout.
 - Press the on-screen resume button  to resume the workout.
 - Press and hold the on-screen stop button  to end the workout.

2.6 WORKOUT HISTORY

Viewing workout records on the watch

From the watch's home screen, press the Upper Button to open applications list. Tap **History**. Tap a completed workout. Swipe up/down the screen to view information about the past workout.

Viewing workout records in the app

Sync the watch data to the **Ryze Connect** app regularly.

To sync data to the app:

- Open the app, go to the **Device** tab and check that the watch is connected. Go to the **Home** tab, swipe down the middle of the phone screen and release your finger when you see .

To view workout records:

1. Go to the **Home** tab. Tap **Exercise** to view training records. If the **Exercise** card is not visible, tap **Edit Card** at the bottom of the screen to add the tile.
2. Go to the **Me** tab. Tap **My Data**. Tap to view activity data, health data and workout records.

2.7 HEART RATE

The watch supports measurement of your heart rate. Measured heart rate is presented in Beats Per Minute (BPM).

To ensure measurement accuracy, wear the watch at least one finger above your wrist bone and make sure it is snug on your wrist. Keep your arm and wrist still during the measurement and wait until the measurement finishes.

2.7.1 MANUAL HEART RATE MEASUREMENT

From the watch's home screen, press the Upper Button to open the applications list. Tap **Heart Rate**. Tap  to start measuring and wait patiently until the measurement finishes.

2.7.2 CONTINUOUS HEART RATE MONITORING

To enable continuous heart rate monitoring, open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Heart Rate**. Turn on the switch for **Continuous Heart Rate Measurements**. Tap  to save the setting.

Heart rate will be measured in real-time during a **Workout** session regardless of the setting for **Continuous Heart Rate Measurements** in the app.

Please note that continuous heart-rate monitoring will increase watch's battery consumption.

2.7.3 SETTING HIGH HEART-RATE ALERT

Open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Heart Rate**. On the following page, tap **High Heart Rate Alert**, follow the prompt to set an alert limit, and tap **Yes** to confirm the setting.

After the feature is turned on, you will receive an alert on the watch when the detected heart rate rises above the set value.

2.7.4 SETTING LOW HEART RATE ALERT

Open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Heart Rate**. On the following page, tap **Low Heart Rate Alert**, follow the prompt to set an alert limit, and then tap **Yes** to confirm the setting.

After the feature is turned on, you will receive an alert on the watch when the detected heart rate falls below the set value.

2.7.5 VIEWING HEART RATE

Methods for checking heart rate:

1. Open the **Heart Rate** application on the watch.
2. Open the **Ryze Connect** app and check that the watch is connected. Go to the **Home** tab. Swipe down the middle of the phone screen and release your finger when you see  to synchronise data. Tap the **Heart Rate** card to view more analysis.
3. Open the **Ryze Connect** app. Go to the **Me** tab. Tap **My Data**.

2.8 BLOOD OXYGEN LEVEL (SPO2)

Blood oxygen level (SpO2) is a percentage measure of your blood's oxygen-carrying capacity and a vital physiological indicator of your respiratory system.

To ensure measurement accuracy, wear the watch at least one finger above your wrist bone and make sure it is snug on your wrist. Keep your arm and wrist still during the measurement and wait until the measurement finishes.

2.8.1 MANUAL SPO2 MEASUREMENT

From the watch's home screen, press the Upper Button to open the applications list. Tap **Blood Oxygen**. Tap  to start measuring and wait until the measurement finishes.

2.8.2 AUTOMATIC SPO2 MEASUREMENT

To set up automatic measurement for SpO2, open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Blood Oxygen**. Turn on the switch for **Automatic Blood Oxygen Measurement**. Tap  to save the setting.

When the feature is enabled, the watch will automatically measure your blood-oxygen level when it detects you are in a static state.

Please note that automatic SpO2 measurement will increase watch's battery consumption.

2.8.3 SETTING LOW SPO2 ALERT

Open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Blood Oxygen**. Turn on the switch for **Low Blood Oxygen Level Reminder**. Tap **Reminder Value** and set a value for the alert. Tap **Yes** then  to save the settings.

After the feature is turned on, you will receive an alert on the watch when the detected blood-oxygen level falls below the set value.

2.8.4 VIEWING SPO2

Methods for checking blood oxygen level:

1. Open the **Blood Oxygen** application on the watch.
2. Open the **Ryze Connect** app and check that the watch is connected. Go to the **Home** tab. Swipe down the middle of the phone screen and release your finger when you see  to synchronise data. Tap the **Blood Oxygen** card to view more analysis.
3. Open the **Ryze Connect** app. Go to the **Me** tab. Tap **My Data**.

2.9 SLEEP MONITORING

To monitor sleep quality, wear the watch while sleeping. To enable sleep monitoring, open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health** and enable **REM Sleep**.

Methods for checking sleep quality:

1. Open the **Sleep** application on the watch. Swipe up/down on screen for a breakdown of duration across various sleep stages.
2. Open the **Ryze Connect** app and check that the watch is connected. Go to the **Home** tab. Swipe down the middle of the phone screen and release your finger when you see

↑ to synchronise data. Tap the **Sleep Cycle** card to view more analysis.

3. Open the **Ryze Connect** app. Go to the **Me** tab. Tap **My Data**.

2.10 AMBIENT NOISE METER

The watch supports measuring sound intensity in its surroundings in decibels (dB). Long-term and continuous exposure to excessive sound volume may lead to hearing damage. Note that water or wind may affect the accuracy of noise measurement.

To enable the feature, open the **Ryze Connect** app. Go to the **Device** tab. Tap **Health**. Tap **Ambient sound level**. On the following screen, turn on the switch for **Ambient volume automatic detection**. Tap  (if any) then < to save the settings.

2.10.1 VIEWING MEASURED SOUND LEVEL

Methods for checking the measurements:

1. Open the **Ambient Noise** application on the watch. Swipe up/down the screen to view more information.
2. Open the **Ryze Connect** app and check that the watch is connected. Go to the **Home** tab. Swipe down the middle of the phone screen and release your finger when you see ↑ to synchronise data. Tap the **Ambient sound level** card to view more analysis. If the card is not visible, tap **Edit Card** at the bottom of the screen to add the tile.

2.11 MUSIC CONTROL

Pixbee Active Fit Smart can play music stored locally on the watch in MP3, AAC, or WAV format.

Managing Music on the watch with the app:

Open the **Ryze Connect** app. Go to the **Device** tab. Tap **Music**. Follow prompts to add, delete and search for audio files via the Local and Built-in tabs in the setting module.

Playing music on the watch:

From the watch's home screen, press the Upper Button to open applications list. Tap **Music**. Tap the on-screen buttons to pause, resume, adjust volume, and skip play. To view music list, tap . Tap to select an audio file.

2.12 AUDIOBOOKS

Pixbee Active Fit Smart can play audiobooks stored locally on the watch in MP3, AAC, or WAV format.

Managing audiobook on the watch with the app:

Open the **Ryze Connect** app. Go to the **Device** tab. Tap **Audiobooks**. Follow prompts to add, delete and search for audio files via the Local and Built-in tabs in the setting module.

Playing audiobook on the watch:

From the watch's **Home** screen, press the Upper Button to open applications list. Tap **Audiobooks**. Tap the on-screen buttons to pause, resume, adjust volume, and skip play. To view music list, tap . Tap to select an audio file.

2.13 WIRELESS INTERCOM

The watch supports wireless communication within a group of up to four Pixbee Active Fit Smart Watches. In an open field, the communication signal works up to a light-of-sight distance of about 70 metres. Effective distance will be affected by battery level and presence of obstructions between devices.

Teaming up

1. Assign one person to be team lead.
2. From the home screen of the team lead watch's, press the Upper Button to open applications list. Tap **BT Intercom**. Tap **Team up** and share the Team Code on the display with team members. Wait till all teammates are added to the group before tapping  to form the team. Once the team is formed, no new teammate can join the team.
3. From the home screen of team member watch, press the Upper Button to open applications list. Tap **BT Intercom**. Tap **Join team**. Enter the Team code shared by the team lead and tap  and wait till team formation process is complete.

Communicating via intercom

Tap the on-screen **Microphone button** once and start speaking to the group. Tap the **Microphone button** again to stop speaking, releasing the channel and letting others speak.

Tap the on-screen **Speaker button** to adjust volume.

Dissolving the team

Tap the on-screen Stop button  and tap  to dissolve the team.

2.14 LEARN ARCADE

The watch features a mini educational arcade comprising of spelling game and fun knowledge vaults.

From the watch's home screen, press the Upper Button to open applications list. Tap **Learn**. Tap to select a module and follow screen prompts to commence mini application.

2.15 ALARM

1. Swipe down on the watch's home screen to reveal the quick settings panel. Tap the **Alarm Clock icon**. Tap  to add an alarm. Use swipe and tap gestures to adjust the time and repeat settings. Tap  to save the setting.
2. Slide the button next to an alarm to toggle it on and off.
3. Swipe left on an alarm and tap the **Bin icon** to delete it.

NOTE: A maximum of 10 alarms can be set.

2.16 STOPWATCH

The watch supports both normal and lap timing with its stopwatch application.

1. From the watch's home screen, press the Upper Button to open applications list. Tap **Clock**. Tap **Stopwatch**.
2. Tap  to start or resume the stopwatch.
3. Tap  to record a lap time. Swipe the screen to scroll through lap times.
4. Tap  to stop the stopwatch.
5. Tap  to reset the stopwatch.

2.17 TIMER

You can set a timer with preset duration or customised duration on the watch.

1. From the watch's home screen, press the Upper Button to open applications list. Tap **Clock**. Tap **Timer**.
2. Tap on a preset time to start a timer. Tap  to set a customised duration. Tap  to pause timing. Tap  to resume timing.

2.18 MISSION REWARDS

Mission rewards is a built-in feature of the Pixbee Active Fit Smart Watch that turns everyday habits and routines into a rewarding experience. Guardians set up daily tasks through the **Ryze Connect** app, and watch users earn virtual gold coins by tapping on they watch to confirm completed tasks. Coins are stored in **Coin Stash** watch application and spent by redeeming rewards set up and approved by the guardian.

There are two ways to earn gold coins:

- Completing daily tasks on the watch, set up and managed by the guardian via the **Habit Formation** module in the **Ryze Connect** app.
- Receiving **Gold Coins** sent directly to the watch by the guardian via the **Reward** module in the **Ryze Connect** app.

Guardians can view and manage the watch user's **Coin Balance** from the **Reward** module in the **Ryze Connect** app.

2.18.1 HABITS REMINDER

Set reminders on the watch for activities, chores and daily routines. When a watch user confirms a completed habit, they earn the number of gold coins assigned to that task by the guardian.

Setting up a reminder

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Habit Formation**.
3. If no reminder has been set, tap  button, and follow the prompts to complete the settings for name, time, repeat cycle and reward of the new reminder. Tap **Done**.
4. To add new reminder to an existing list, tap the . Tap **View Habits**. Tap  button, and follow the prompts to complete the settings for name, time, repeat cycle and reward (gold coin) of the new reminder. Tap **Done**.

COIN VALUE GUIDE FOR TASKS	
COINS	USE
1-2 coins	Quick or easy tasks (e.g. wake up)
3-5 coins	Regular effort tasks (e.g. walk the pet)
6-10 coins	Bigger challenges (e.g. complete homework)

Editing an existing reminder

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Habit Formation**.
3. Tap the . Tap **View Habits**.
4. Tap the name of the habit you want to change. Follow the prompts to update the name, time, repeat cycle or reward (gold coin). Tap **Done**.

Deleting an existing reminder

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Habit Formation**.
3. Tap the . Tap **View Habits**.
4. Tap the name of the habit you want to delete. Tap **Delete**.

Confirming a completed task on the watch

At the set reminder time, a prompt will automatically appear

on the watch screen. The watch user taps  to confirm the task has been completed. Gold Coins assigned to that task are added to the **Coin Stash** immediately.

Note: The prompt will disappear after a short time if not responded to. Each task can only be confirmed once per scheduled occurrence.

Viewing the next reminder on the watch

From the watch's home screen, press the Upper Button to open applications list. Tap **Habits**.

Monitoring progress in the app

Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app. Tap **Habit Formation**. You can view a tally of completed tasks and gold coins earned.

2.18.2 REWARD SYSTEM

The **Reward** module is where guardians manage the watch user's coin balance, send gold coins directly, and set up reward cards that watch users can redeem using the virtual gold coins they have earned.

Getting there

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Reward**. The following screen displays the watch user's current **Coin Balance** along the top.

Sending gold coins directly

Guardians can edit and send gold coins directly to the watch user's **Coin Balance** at any time — for example, to recognise good behaviour or effort outside of a scheduled habit.

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Reward**. Tap the **Gold Coin icon**.
3. Set the number of gold coins.
4. Confirm to add the coins to, and adjust, the **Coin Balance** immediately.

Adding a reward card

Every reward the watch user can redeem must first be set up as a **Reward card** by the guardian. Watch users cannot redeem a reward unless it has been created and saved here.

1. Open the **Ryze Connect** app. Go to the **Device** tab. Check that your watch is paired to the app.
2. Tap **Reward**. Tap  to add a new reward card.

3. Tap the **Reward name** field to select a preset reward name from the list, or enter a custom reward name.
Tap the **Coins** field to set the coin cost for redeeming this reward. Optionally, enter a description or any rules associated with the reward (e.g. conditions or time limits).
4. Tap **Done (Complete)** to save the settings. The reward card will appear as a tile on the **Reward** menu.

Repeat these steps to add as more reward cards as needed. You can edit or remove any reward card at any time.

Redeeming a reward card

When the watch user wants to redeem a reward, they come to their guardian to action it together. The guardian opens the app and completes the redemption.

1. Open the **Ryze Connect** app. Go to the **Device** tab.
Check that your watch is paired to the app.
2. Tap **Reward**.
3. Find the relevant reward tile and tap **Redeem**. To redeem a reward, the **Coin Balance** must be greater than the coin cost of the reward.
4. The corresponding coin cost is automatically deducted from the **Coin Balance**.

For most rewards, such as "go to the amusement park", it is then up to the guardian to fulfil the reward in real life.

For the **Pet Coins** reward, the converted **Pet Coins** are added automatically to the **Digital Pet** application on the watch.

- 1 Gold Coin = 10 **Pet Coins**
- **Pet Coins** are used to buy food to care for the pet in the **Digital Pet** application on the watch.
- Set up **Pet Coins** as a reward card in the **Reward** module like any other reward. When redeemed, **Pet Coins** are credited to the **Digital Pet** app automatically.

COIN VALUE GUIDE FOR REWARDS	
COINS	USE
5-15 coins	Small treats (e.g. choose a cake)
20-40 coins	Medium Rewards (e.g. a day trip)
50+ coins	Big Rewards (e.g. a theme park visit)

2.19 DIGITAL PET

The watch features a digital pet application. Nurture and watch your companion hatches magically and grow into adulthood. Care for the wellbeing of your pet and keep it happy with a balanced diet.

How it works:

- Convert your daily steps into Pet Coins and exchange yummy pet food with the Pet Coins.
- Obtain bonus Pet Coins by converting your Gold Coins via the **Ryze Connect** app. Gold Coins can be earned by completing assigned routines set via the app.

Starting (adopting) a pet

1. From the watch's **Home** screen, press the Upper Button to open applications list. Tap **Digital Pet**.
2. Use Upper / Lower Button and tap gestures to set a pet name, follow prompts and tap  to save the setting. Tap the magical egg to hatch a pet.

Nurturing the pet

1. Checking pet status: Tap the on-screen  icon to edit pet name and view pet information such as growth stage, pet coins and pet vitality index.
2. Feeding: Tap the on-screen  icon. Tap **Food**. Swipe screen and tap to choose a food. Each type of food costs a certain amount of pet coins.

Adding a pet friend

You can add a digital pet from another Pixbee Active Fit smart watch when the watches remain close to each other. Once the pet friend is added, you can send Pet Coins and pet food to the new pet friend.

To add a pet friend, first decide on an initiator watch and follow the steps below.

1. From the initiator watch, tap **Digital Pet**. Tap the on-screen  icon. Tap **Invite friend** to reveal a connection password.
2. From the friend's watch, tap **Digital Pet**. Tap the on-screen  icon. Tap **Add friend** and enter the connection password from the initiator's watch.
3. Once a friend is added, the watch screen will show the two pet friends. Swipe up the screen to reveal buttons for checking pet status, choosing feeding options, sending pet coins to friend and unpairing pet friend.

2.20 GAMES

The smart watch features mini game applications.

From the watch's home screen, press the Upper Button to open applications list. Tap **Games**. Tap a game to start playing. During game play, use tap and swipe gestures to progress the game. Press the Upper Button to pause, resume or exit game.

2.21 SEEKING HELP

From the watch's home screen, press the Upper Button to open applications list. Tap **Help**. Scan the QR code with your smartphone to seek help from Pixbee website.

2.22 PAIRING QR CODE

From the watch's **Home** screen, press the Upper Button to open applications list. Tap **QR Code**. Scan the QR code with the scanner accessible via the **Device** tab in the **Ryze Connect** app to pair with the watch.

3.0 RYZE CONNECT APP

The **Ryze Connect** app is a free app that allows you to manage and control various features of the watch from your smartphone. The app supports watch settings, data updates, data synchronisation, data analysis, data reporting and data sharing with selected third-party apps.

For best user experience, it is recommended that you connect your smart watch to the app regularly.

From time to time, we will add improvements to the watch and enhance app functionality. For the latest updates on our products, including this manual, please visit www.pixbee.com.au and www.pixbee.co.nz

3.1 SYNCING WITH THE WATCH

Open the **Ryze Connect** app and go to the **Device** tab and check that the watch is connected. Go to the **Home** tab. To sync the smart watch data with the app, swipe down the middle of the phone screen and release your finger when you see ↑ to synchronise data.

3.2 UPDATING THE WATCH

You should check the app regularly for latest software available for the watch watch. Here is how:

1. Ensure that the watch battery level is more than 30%. If not, please recharge the watch.
2. Keep your smart watch and smartphone close to each other and ensure that they remain stationary.

3. Open the **Ryze Connect** app and go to the **Device** tab. Ensure that your smartphone and smart watch are connected via Bluetooth. Tap on the watch's thumbnail image. In the following screen, tap **Device Update**. Follow the prompt to complete installation. The updating process may take up to a few minutes to complete.

3.3 DISCONNECTING THE WATCH

Open the **Ryze Connect** app and go to the **Device** tab. Tap on the watch's thumbnail image. Tap **Delete Device** and follow the prompt to confirm the action.

3.4 FAMILY MEMBER DEVICE MANAGEMENT

Through the **Ryze Connect** app, you can conveniently manage the smart watches of family members to set goals, and monitor each family member's health, and fitness activities from one location and Device.

Creating a family account

Open the **Ryze Connect** app and go to the **Device** tab. Tap  in the top-right corner. Along the top of screen, tap  below **Family member**. Tap **Create Family member's Account**. Follow the prompts and fill in the required information. When prompted, select **I Have read and Agree User and Privacy Policy**. Select **Create**. Select **I Agree**. Follow the prompts to complete user settings. Select **Finish**.

Pairing a Device to a family account

Open the **Ryze Connect** app. Bring the smart watch that you wish to pair close to your smartphone. Go to the **Device** tab. Tap  in the top-right corner. In the following screen, tap on a **Family member** icon at the top. Tap a device to connect in the found list. Follow the prompt instruction and select **Finish** to complete pairing.

Viewing and managing a family member Device

You can view and manage the connected device of a family member using the family account with the **Ryze Connect** app.

Bring the connected smart watch close to your smartphone. Open the app and go to the **Home** tab. Tap **My Family** and then tap on a family account.

To sync data with the connected smart watch, swipe down on the screen.

To adjust settings for the connected device, tap on the device icon.

To view workout records and more reporting, tap on an activity card.

To manage fitness goal for the connected smart watch, scroll down and tap **Set fitness goals**.

3.5 THIRD-PARTY APPS SUPPORT

The **Ryze Connect** app supports data sharing with selected third-party apps.

3.5.1 SHARING DATA WITH STRAVA

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Strava**. Follow the prompts to complete the process.

3.5.2 SHARING DATA WITH HEALTH CONNECT

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Health Connect**. Follow the prompts to complete the process.

NOTE: Data sharing with **Health Connect** is only possible on smart devices running on Android systems.

3.5.3 SHARING DATA WITH APPLE HEALTH

To authorise and enable data sharing, open the app. Go to **Me** tab. Tap **Data Sharing and Authorisation**. Tap **Apple Health**. Follow the prompts to complete the process.

NOTE: Data sharing with **Apple Health** is only possible on smart devices running on iOS systems.

3.6 VIRTUAL MEDAL AWARDS

Keep yourself motivated and incentivised towards personal fitness goals by winning virtual medals after completing various achievements. To review virtual medals, open the app and go to **Me** tab. Tap on **My Medals**.

3.7 UPDATING THE APP

Open the **Ryze Connect** app. Go to **Me** tab. Tap **Check for Updates**. Follow the prompts to complete the updating process.

3.8 USER PROFILE SETTINGS

The watch makes use of user profile information including gender, age, height and weight to improve accuracy of the measured data.

Updating user profile with the app

Open the **Ryze Connect** app. Go to the **Me** tab. Tap on **User Profile Image** in the top-left corner. You can edit the username, user profile image and profile settings. Tap  to save changes made.

3.9 PREFERENCE SETTINGS

To change the preference settings, open the **Ryze Connect** app. Go to the **Me** tab. Tap **Settings**. Tap **Preferences**. Adjust your preferences for measurement units and date and time formats. Tap  to save the settings.

3.10 ACCOUNT SETTINGS

Changing email account

Open the **Ryze Connect** app. Go to the **Me** tab. Tap **Settings**. Tap **Modify Email**. Follow the prompts to change the email account.

Changing account password

Open the **Ryze Connect** app. Go to the **Me** tab. Tap **Settings**. Tap **Change Password**. Follow the prompts to change the account password.

Cancelling account

Open the **Ryze Connect** app. Go to the **Me** tab. Tap **Settings**. Tap **Cancel Account**. Follow the prompts to cancel the account.

3.11 DATA PRIVACY AND SECURITY

You can control how your data is shared to the cloud.

To clear personal data that is stored in the cloud, go to the **Me** tab. Tap on **Settings**. Tap on **Privacy and Security**. Tap **Clear Personal Data on the Cloud**.

To stop data syncing to the cloud, go to the **Me** tab. Tap on **Settings**. Tap on **Privacy and Security**. Turn off the switch for each displayed item.

3.12 SIGNING OUT

In the app go to the **Me** tab. Tap **Settings**. Tap **Sign Out**.

4.0 SPECIFICATIONS

Display	1.106-inch AMOLED
Display Resolution	360 x 360
Battery Capacity	200mAh
Rated Input	5V= 0.5A
Charging Time	Approximately 2 hours for a full charge
Battery Life*	5 to 7 days
Ingress Protection	3ATM
Wireless Connectivity	Bluetooth 5.3 BLE
Bluetooth Frequency	2402MHz – 2480MHz
Watch Dimension	230mm(L) x 41.6mm (W) x 11.7mm (T) (including straps and protrusions)
Wrist Circumference	120mm – 185mm
Compatibility	Android 7.0 and iOS 14 versions and above
Operating Temperature	-10°C to 60°C
Charging Temperature	0°C to 50°C

*Useful battery life will be shortened with more frequent use of intercom, screen activation, vibration notification, data sync to the App, and continuous monitoring of heart rate, blood oxygen and ambient noise, and other functions.

5.0 SAFETY AND HANDLING

WARNING : Failure to follow safety instructions could result in fire, electric shock, injury or damage to your watch or other properties and invalidate warranty.

- The Pixbee Active Fit is not intended for medical or therapeutic use. Any data or information provided should not be used for the diagnosis, treatment, monitoring, or prevention of other health conditions. Always consult your doctor for health and medical advice.
- To prevent watch failure, do not place the watch and its accessories near extreme temperatures.
- Do not use the watch in saunas, hot springs, deep dives or high temperatures and high humidity environments.
- To prevent damage, do not subject the watch and its accessories to sharp objects, impact and shock.
- To avoid damage and injury, do not attempt to disassemble, modify or repair the watch and/or its accessories.
- Before charging, use a clean cloth to wipe, clean and remove any residual sweat or moisture on the watch contact pins.
- To prevent short circuits, keep the magnetic charging contacts and charging port dry, clean and away from conductive materials such as metal powders, pencil leads and liquids.
- Charge the watch with a manufacturer recommended charging base for Pixbee Active Fit, a USB port of a computer, or a third-party power adaptor that is fully compliant with USB 2.0 or later and with applicable safety standards, national and local laws and regulations.
- Do not use the watch whilst charging. The watch and power adaptor will become warm when charging. Sustained contact with warm surfaces for long periods of time may cause discomfort or injury. Allow the watch to cool down completely before wearing it.
- To protect the watch's performance, keep it away from strong magnetic fields and objects such as magnetic stripe cards, credit cards, phone cards, passbooks and microwaves.
- Do not expose the watch and charging base to high temperatures for a prolonged period.
- If you find the watch particularly uncomfortable, please adjust the watch strap or remove it.

- Clean and dry the watch if exposed to fresh water, perspiration after workouts, or heavy sweating. Wearing dirty, wet straps can cause skin irritations.
- Some users may experience skin irritation after prolonged use of the watch, especially if one has sensitive skin or allergies. If you experience any skin irritation, please stop wearing the watch.
- If necessary, use only soap-free cleanser to clean the watch and let it dry completely. Chemical cleaners and solvents can damage plastic components and finishes.

6.0 WARRANTY TERMS AND CONDITIONS

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is provided in addition to your rights under the Australian Consumer Law. Directed Electronics Australia Pty Ltd (Directed Electronics) warrants that this product is free from defects in material and workmanship for a period of 12 months from the date of purchase or for the period stated on the packaging. This warranty is only valid where you have used the product in accordance with any recommendations or instructions provided by Directed Electronics.

This warranty excludes defects resulting from alterations of the product, accident, misuse, abuse or neglect. To claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics.

Directed Electronics will repair, replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. You will bear all costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics.

**Please scan this QR code
for customer support:**



6.1 INDEMNITY

You agree to defend, indemnify and hold harmless Pixbee and its subsidiaries and affiliates from and against any and all claims, proceedings, injuries, liabilities, losses, costs and expenses (including reasonable legal fees), including but not limited to, claims alleging negligence, invasion of privacy, copyright infringement and/or trademark infringement against Pixbee and its subsidiaries and affiliates, relating to or arising out of your breach of any provision of these terms, your misuse of Pixbee products or its services, or your unauthorized modification or alteration of products or software.

6.2 WARRANTY AND WARRANTY DISCLAIMER

Pixbee has a limited warranty, whereby Pixbee warrants to you and only to you that this Pixbee product will be free from defects in materials and workmanship for one (1) year from the date of your purchase (unless a longer warranty period is required by law). The specifics of this Pixbee limited warranty are covered in this manual.

To the extent possible under governing law, other than the above product warranty for the Pixbee product you understand and agree that the Pixbee services are provided on an "as is" and "as available" basis.

Pixbee makes no warranty that the Pixbee product and services will meet your requirements or that use of the Pixbee services will be uninterrupted, timely, secure or error-free. Nor does Pixbee make any warranty as to the accuracy or reliability of any information obtained through Pixbee (including third party content), that any defects in the Pixbee products or services be corrected or that the Pixbee products or Pixbee services will be compatible with any other specific hardware or service.

Further, Pixbee does not warrant that Pixbee products or services or Pixbee servers that provide you with data and content are free of viruses or other harmful components.

Pixbee also assumes no responsibility for and shall not be liable, for any damages caused by viruses that may infect your Pixbee. In the event of any loss, damage or injury, you will not look to Pixbee to compensate you or anyone else. You release and waive for yourself and your insurer all subrogation and other rights to recover against Pixbee arising as a result of the payment of any claim for loss, damage or injury.

Pixbee equipment and services do not cause and cannot eliminate occurrences of certain events, including, but not limited to fires, floods, burglaries, robberies and medical problems. Pixbee makes no guarantee or warranty,

including any implied warranty of merchantability or fitness for a particular purpose, that the Pixbee equipment and services provided will detect or avert such incidents or their consequences.

Pixbee does not undertake any risk that you or property, or the person or property of others, may be subject to injury or loss if such an event occurs. The allocation of such risk remains with you, not Pixbee.

Other than the above product warranty for the Pixbee products, its suppliers disclaim all warranties of any kind, whether express, implied, or statutory, regarding the Pixbee services, including any implied warranty of title, merchantability, fitness for a particular purpose, or non-infringement of third-party rights.

Because some jurisdictions do not permit the exclusion of implied warranties, the last sentence of this section may not apply to you.

Pixbee hereby further expressly disclaims all liability for any claims for service failures that are due to normal product wear, product misuse, abuse, product modification, improper product selection or your non-compliance with all applicable federal, state or local laws.

This warranty and warranty disclaimer give you specific legal rights, and you may have other rights that vary by state, province, or country. Other than as permitted by law, Pixbee does not exclude, limit or suspend other rights you have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights, you should consult the laws of your state, province, or country. For our Australian customers: Please note that this warranty is in addition to any statutory rights in Australia in relation to your goods which, pursuant to the Australian Consumer Law, cannot be excluded.

6.3 LIMITATIONS OF LIABILITY

Under no circumstances will Pixbee be liable in any way for any content, including, but not limited to, the loss of content, any errors or omissions in any content, or any loss or damage of any kind incurred in connection with use of or exposure to any content posted, emailed, accessed, transmitted, or otherwise made available via Pixbee.

Pixbee liability for damages, especially for breach of duty or obligation, delay in performance, non-performance, or malperformance shall be precluded, except when these are due to negligent breaches of any significant contractual duty or obligation on the part of Pixbee. Any liability for

negligence is limited to direct losses usually and typically foreseeable in such case. Should the claim for damages be based on wilful or grossly negligent breach of contractual duty or obligation on the part of Pixbee, the preclusion and limitation of liability mentioned in the preceding sentences will not apply. The preceding preclusion and limitation of liability will also not apply to claims for damages arising out of loss of life, bodily injury or health impacts for which Pixbee may be liable, or for non-contractual liability.

Some states and countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Additionally, this provision is not intended to limit Pixbee's liability in the event of Pixbee's wilful or intentional misconduct.



Smart Tech for Aspiring Explorers.

DIRECTED.

All Images, Information and Content are Copyright
© 2026 Directed Electronics Australia Pty Ltd.
All Rights Reserved.

www.directed.com.au | www.directed.co.nz



www.pixbee.com.au | www.pixbee.co.nz